


► Type ST24 : Robinet gaz thermostatique avec veilleuse et sécurité Gas tap with thermostat, pilot and security

Homologué :
Approved :

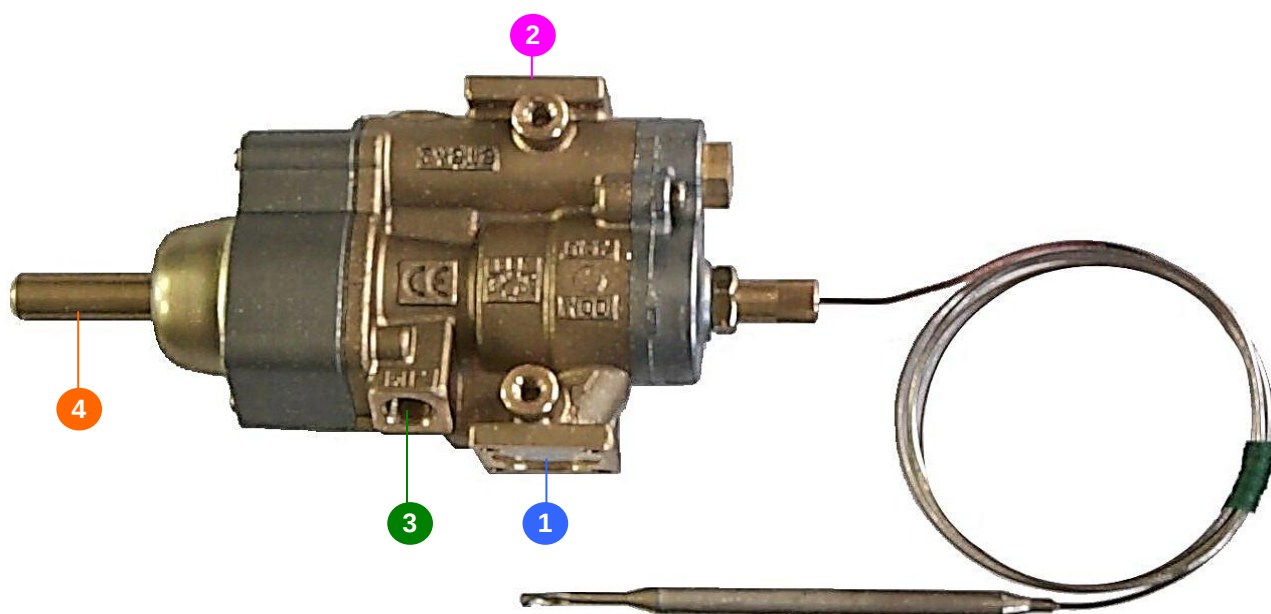

MONTAGE :	ASSEMBLING :	
- Positionner le bulbe thermostatique correctement. - Rayon minimum de courbure de capillaire.	- Position rightly the thermostatic bulb. - Minimum bending radius of capillary.	R = 15mm
CARACTERISTIQUES TECHNIQUES :	TECHNICAL DATA :	
- Pression maximum	- Maximum pressure	50 mbar
- Température maximum	- Maximum temperatures	
. Corps	. Body	150 °C
. Thermocouple	. Thermocouple	600 °C
. Bulbe thermostatique	. Thermostatic bulb	350°C
- Plage de régulation thermostatique	- Thermostatic adjusting range	120°C - 320°C
. Pour four	. For oven	120°C - 280°C
. À la demande	. On request	140°C - 300°C
. Pour marmite	. For stoves	100°C - 200°C
		13°C - 38°C
- Ø Thermocouple	- Ø Thermocouple	M9x1
- By pass (min.) Ø sur demande	- By pass (min.) Ø on request	0,35 - 3,5 mm
- Débit max.	- Maximum flow rates	
💧 p 1 mbar	💧 p 1 mbar	air 1.4 m³/h town gas 2.2 m³/h natural gas 1.9 m³/h butane 2.5 m³/h
💧 p 2 mbar	💧 p 2 mbar	air 1.9 m³/h town gas 2.9 m³/h natural gas 2.5 m³/h butane 3.4 m³/h
💧 p 2,5 mbar	💧 p 2,5 mbar	air 2.2 m³/h town gas 3.4 m³/h natural gas 3 m³/h butane 4 m³/h

FONCTIONNEMENT :

- Appuyer et tourner la manette en position ★
- Pousser à fond, allumer la veilleuse et attendre quelques secondes.
- Pour allumer le brûleur principal : maintenir la pression manuelle puis tourner la poignée sur la position désirée (💧 max. et 💧 min.)
- Chaque graduation entre 💧 max. et 💧 min., est mise en évidence par un crantage correspondant à une différence de température du four de 20°C.

OPERATING :

- Press and turn the handle in position ★
- Push down, light the pilot burner and wait a few seconds.
- In order to light the main burner : while pushing turn further on the handle until required position (💧 max. and 💧 min.)
- Each division within 💧 max. and 💧 min. is pointed out by release, which gives a temperature difference in oven of 20°C.